

Assembly Instructions

- STEP1 Place base on flat surface.
- STEP2 Place back frame on rear,
- STEP3 Insert sides
- STEP 4 Insert top
- STEP5 Place front frame on,
Then screw Front and back frame with m5 screws
- STEP 6 Mount upright set (A) to matching holes using m6 cage nuts set.
- STEP 7 Insert front door using lpin.

Visual Instructions Below

MODULAR BATTERY BOX ASSEMBLY

TOOLS NEEDED: M5 ALLEN KEY AND POZI SCREW DRIVER.

STEP1-PLACE BASE ON FLAT SURFACE.

STEP2-PLACE BACK FRAME ON REAR

STEP3- INSERT SIDES.

STEP4- INSERT TOP.

STEP5- PLACE FRONT FRAME ON, THEN SCREW
FRONT AND BACK FRAME WITH M5 SCREWS.


STEP6-MOUNT UPRIGHT SET (A) TO MATCHING HOLES
USING M6 CAGE NUT SET.

STEP7-INSERT FRONT DOOR USING LPIN.

MODEL NO:


CHECKLIST

BOTTOM
BACK
SIDESX2
TOP
FRONT
UPRIGHTSET (A)
DOOR
CAGE NUT SET X 12
M5 X 8 ALLEN CAP
M10 FEET & NUTS X4

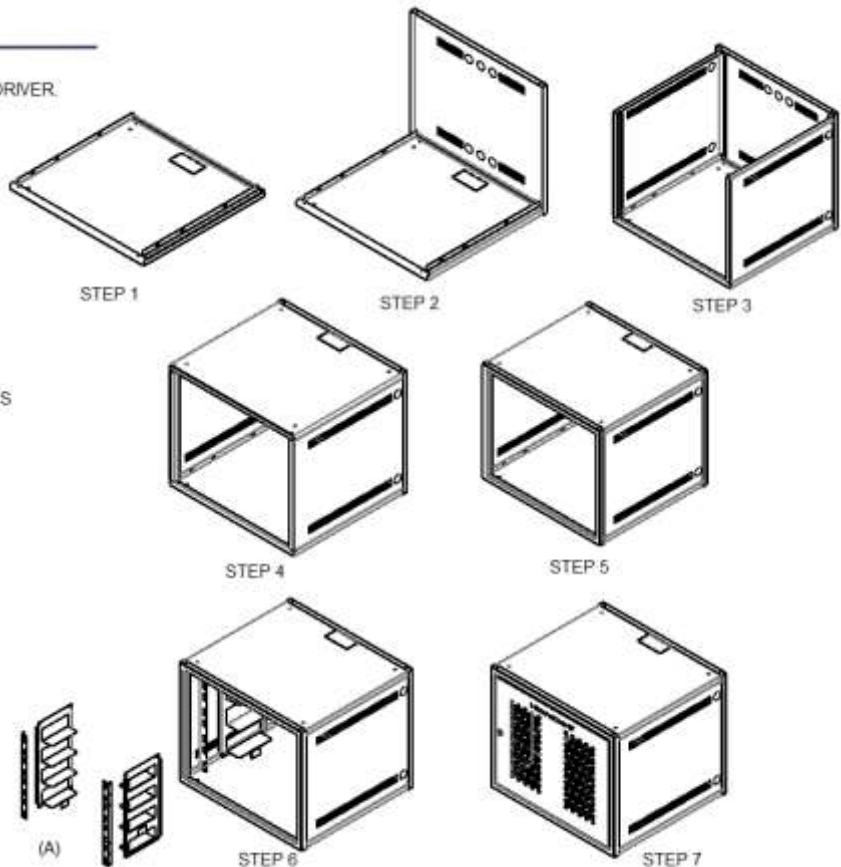


Door Design for illustrative purposes only - (See 2D design for current door designs)

3D – Assembled – Floor Mount

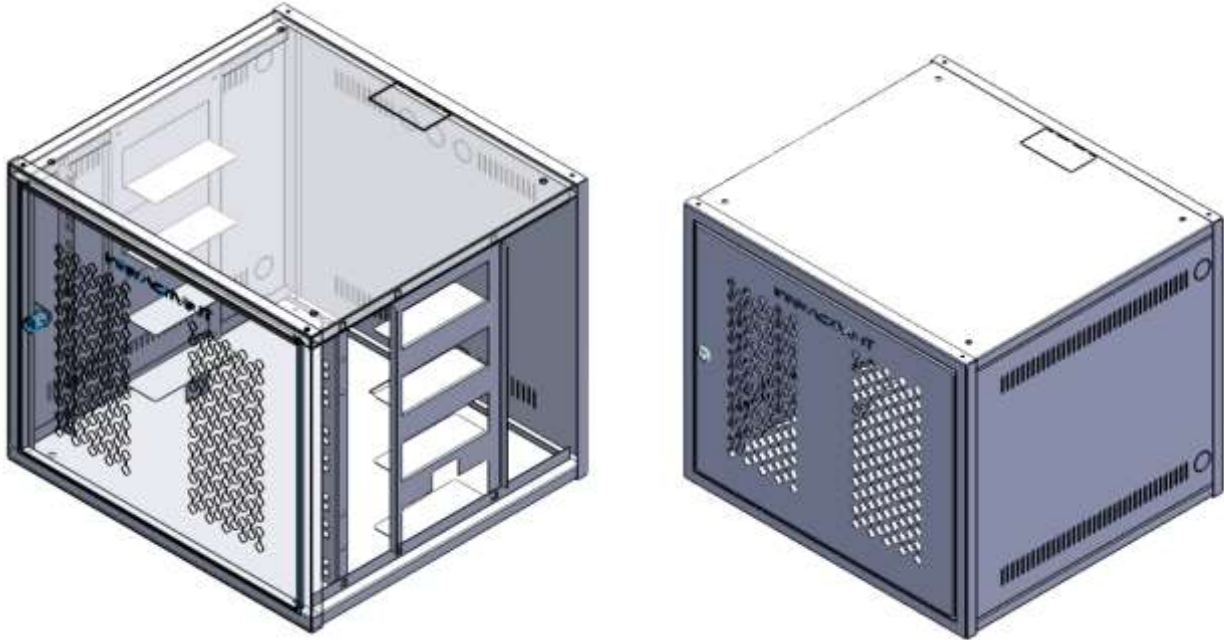


Door Design for illustrative purposes only - (See 2D design for current door designs)

3D – Assembled External – Vertical Wall mount

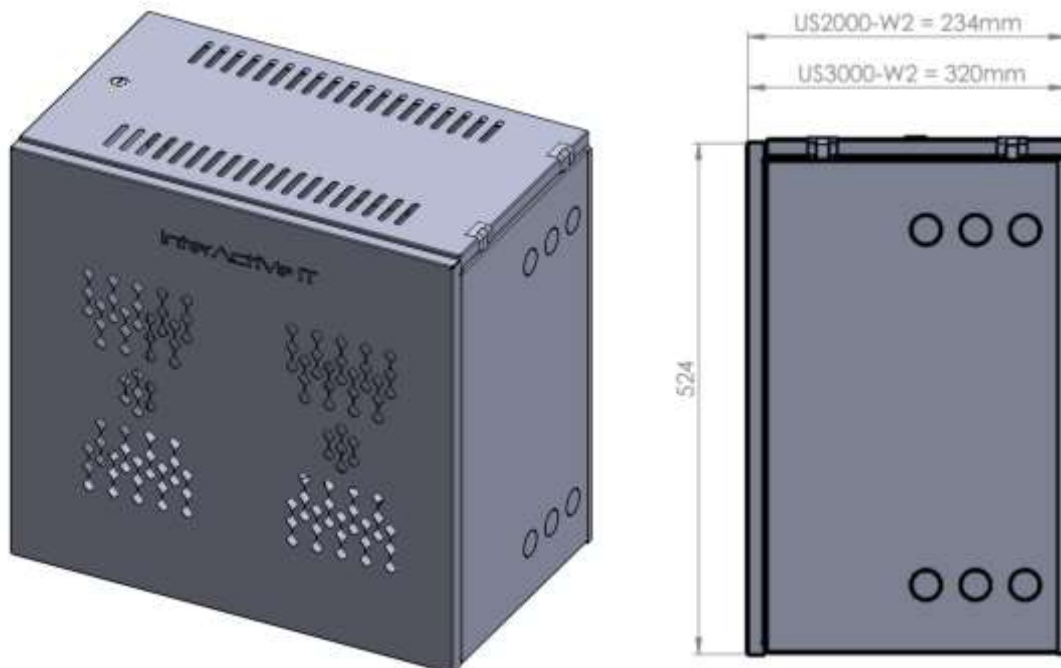


2D – Dimensions

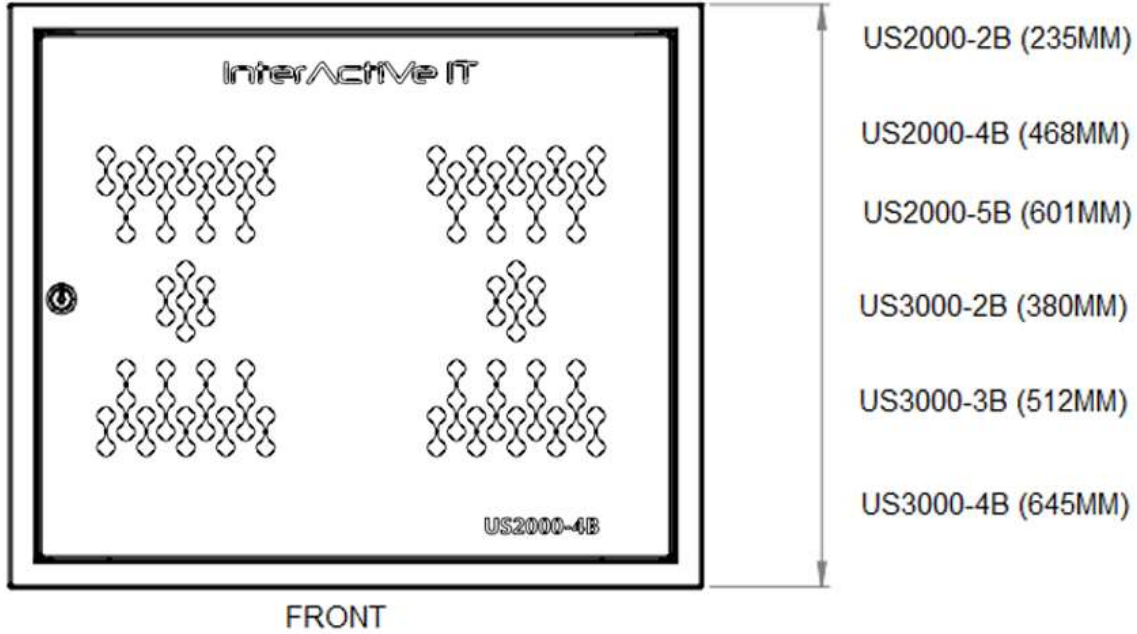


Design illustrative purposes only, may vary based on product & design

Sides

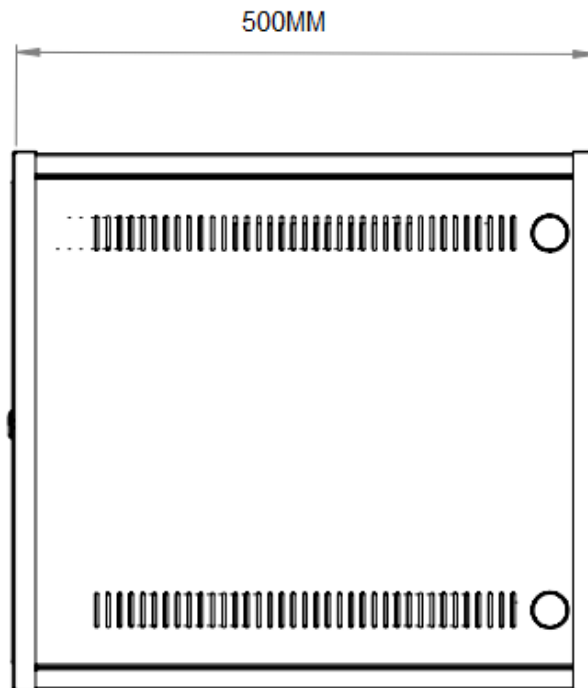


2D Door designs



US2000-2 & US3000-2

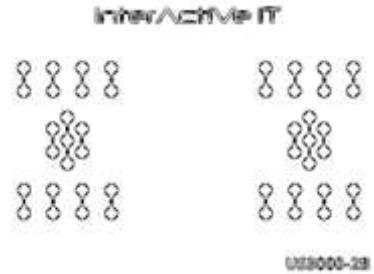

US2000-4 & US3000-3

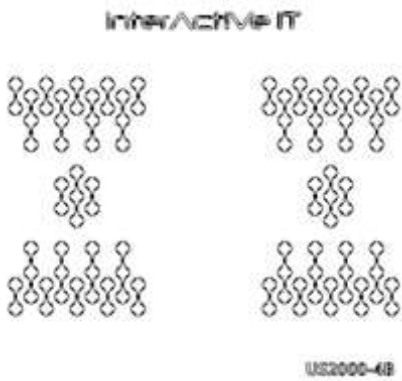

Vertical Wall Mounts & US2000-5 & US3000-4

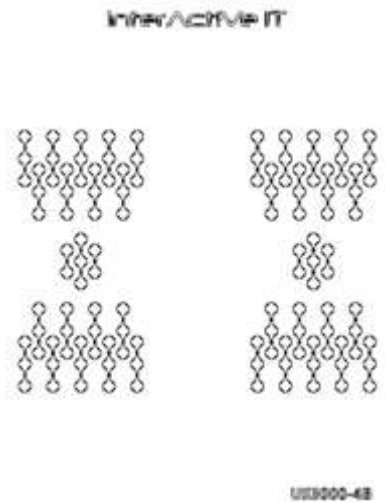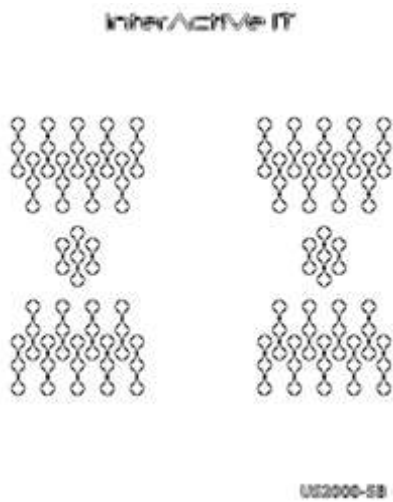

WARRANTY SERVICE

LIMITED WARRANTY

FOR ONE YEAR from the date of purchase from the supplier, this product is warranted against any defects in material or workmanship.

In the event of a warranty claim, an invoice from the supplier is required, a defective part will be replaced free of charge by the manufacturer.

If a replacement part is unavailable, the product will be replaced with one of equal value.

This warranty does not apply to a product that is damaged or altered through transportation, misuse, abuse, corrosion, accident, neglect, modification or mishandling.

Please note the cabinets have been strictly engineered as follows

US2000-W2B = 2x US2000 Pylontech Batteries (Wall Mount)
US2000-2B = 2x US2000 Pylontech Batteries
US2000-4B = 4x US2000 Pylontech Batteries
US2000-5B = 5x US2000 Pylontech Batteries

US3000-W2B = 2x US3000 Pylontech Batteries (Wall Mount)
US3000-2B = 2x US3000 Pylontech Batteries
US3000-3B = 3x US3000 Pylontech Batteries
US3000-4B = 4x US3000 Pylontech Batteries

3 cabinets stacked at most, largest cabinet at the bottom.
Any damage due to over stacking will not be covered by warranty.

Please send any warranty queries together with a copy of your invoice to

sales@interactiveit.co.za
www.interactiveit.co.za